

INSTRUCTIONS ON AND OFF SWITCH

PAGE-5



3-POSITION SWITCH

The 'Special Ops' Compact sight has a unique power on switch system that no other sight like this has. In the off position, the sight is turned completely off to conserve power. In the auto position the patented front light sensor measures the ambient light in front of the sight and adjusts the 'pulse', power saving L.E.D. to the correct intensity. In the Full-power on position, the sight gives you full power for that bright L.E.D. dot when you need it.

The protective sight cap is designed to protect your unit when not in use. So you don't forget to leave the switch on or on auto, the sight must be turned to full off position before is will correctly fit snugly. When you remove it, turn it to full on, or put it on auto so it will adjust light automatically to ambient light.

PROTECTIVE SIGHT CAP



Page-6



*NOTE

The switch safety tab can be removed if you wish to leave your switch on auto and put the cap on. The tab was placed there so you could not leave the switch on. So if you decide to cut it out, don't forget to put the switch on auto or off before you replace the cap.

SWITCH SAFETY TAB



COMPACT SIGHT COVER

INSTRUCTIONS

SIGHT ADJUSTMENTS
LOOSEN SET SCREWS

PAGE-3

P.F.I. INC.


1. LOOSEN WINDAGE SET SCREW



USING THE WRENCH SUPPLIED WITH THE SIGHT, LOOSEN THE WINDAGE SET SCREW BY TURNING IT COUNTER CLOCK WISE (TO LEFT) UNTIL IT IS NOT AGAINST THE WINDAGE ADJUSTMENT SCREW WHICH IS ON THE RIGHT SIDE OF THE SIGHT.



2. LOOSEN ELEVATION ADJUSTMENT SET SCREW

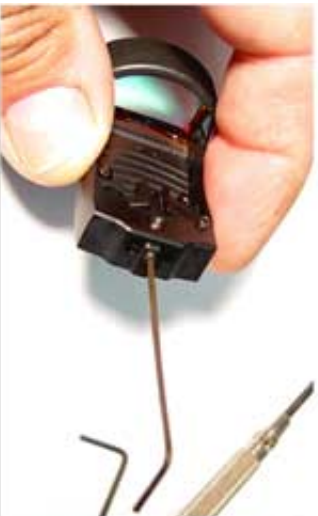

LOOSEN THE ELEVATION SET SCREW BY TURNING COUNTER CLOCK WISE UNTIL THE SCREW IS NOT TOUCHING THE ELEVATION SCREW WHICH IS LOCATED AT THE TOP OF THE SIGHT.

*NOTE: USE THE WRENCH AS SHOWN SO NOT TO TORQUE ANY OF THE SCREWS WHEN MAKING ADJUSTMENTS AND SECURING SET SCREWS!

INSTRUCTIONS

SIGHT ADJUSTMENTS

PAGE-4


P.F.I. INC.

1. WINDAGE COUNTER CLOCK WISE

TO MOVE BULLET IMPACT TO LEFT.




2. CLOCK WISE TO MOVE BULLET IMPACT TO THE THE RIGHT.

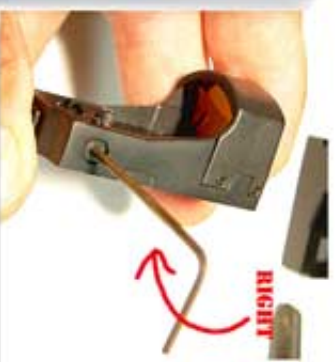

3. COUNTER CLOCK WISE TO MOVE BULLET IMPACT DOWN; LEFT TO LOWER.



4. CLOCK WISE TO MOVE THE BULLET IMPACT UP; RIGHT TO RAISE.

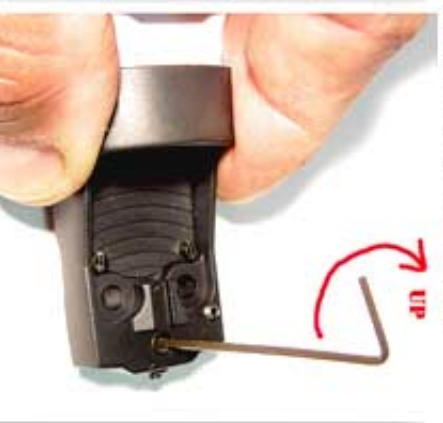

*WHEN YOU ARE SIGHTED IN, THEN TIGHTEN THE WINDAGE AND ELEVATION SET SCREWS; SNUG ONLY. AFTER TIGHTENING SET SCREWS THEN CHECK ZERO AGAIN. IF NEEDED REPEAT PAGE 1 AND 2 FOR FINAL SIGHT SETTING.

SIGHT COVER




1632 3V BATTERY



RAPID RETICLE
 P.F.I. INC. T.M.
 Exclusive features on this
 sighting system:
 -front light sensor
 -top battery loading
 -power switch
 -mil spec designs

COMPACT SIGHT

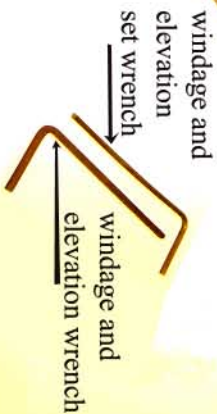

box 4301, San Dimas, CA 91773 <rapidreticle.com>

The P.F.I. inc., Special Ops Compact sight comes with a #1632, 3-volt battery, protective sight cover, and two adjustment wrenches. Read the instructions carefully prior to installing the sight. It is recommended that the sight be installed by a qualified gun smith. The sight is a fine instrument and has to be properly installed and adjusted so it does not get damaged. Enjoy your new sight and shoot safely at all times. It is recommended that you use a P.F.I. aluminum base.

INSTRUCTIONS

- 1. OPEN BATTERY COMPARTMENT.**
- 2. INSTALL BATTERY, + UP.**



3. SECURE BATTERY COMPARTMENT DOOR.

USING A PROPERLY FITTING FLAT-HEAD SCREW DRIVER AT THE SAME TIME PUSHING DOWN ON THE DOOR WITH FINGER, GENTLY TIGHTEN THE SCREWS ONE AT A TIME UNTIL IT IS SNUG. THEN TURN JUST 1/8TH TURN MORE TO SNUG POSITION. DON'T TORQUE OR STRIP THE SCREW. THE PRESSURE OF THE LID ON THE BATTERY WILL HOLD IN PLACE WITH SNUG SCREW!

THE TRAP DOOR BATTERY COMPARTMENT ALLOWS BATTERY REPLACEMENT WITHOUT REMOVING THE SIGHT FROM THE GUN.

